


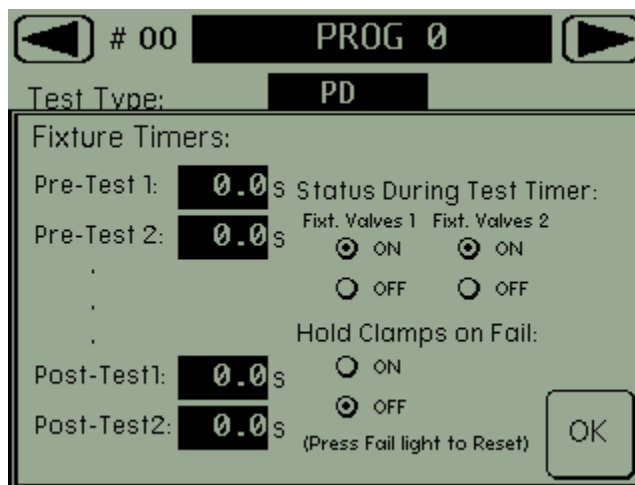

# Clamp – Hold on Fail

The hold on fail feature is located in the 'clamps' menu. Upon test failure the Fail LED will flash. The clamp outputs will remain set. The operator must acknowledge the failure by pressing the Fail LED. This action will then run the post test timers on the clamping routine.

The hold option can be used without clamps enabled. The fail LED will blink and not allow a new start cycle until the reset has been received.



(801)264-1000

79 West 4500 South Unit #21

Salt Lake City, UT 84107

[www.zaxisinc.com](http://www.zaxisinc.com)