




## ASCII data over the Ethernet

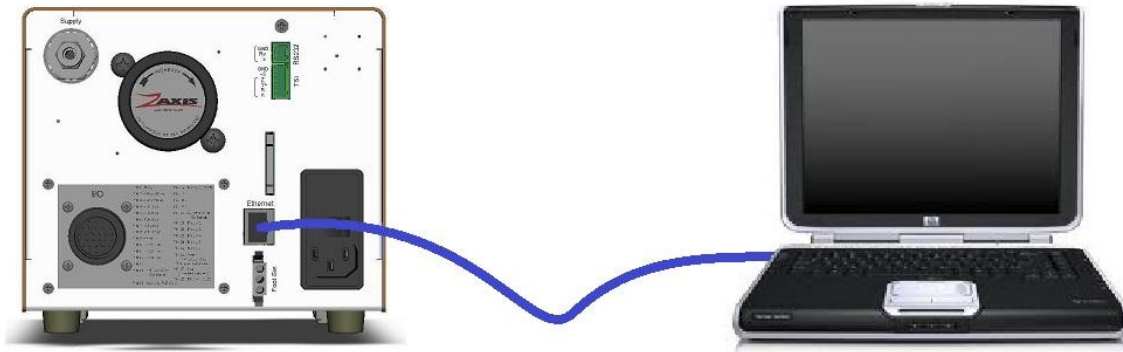

The test data from an Isaac can be collected by a computer via the Ethernet connection on the back of the Isaac.

To collect data on a laptop you will need a crossover Ethernet cable ([see diagram](#)) and a terminal emulation program such as HyperTerminal.

To begin find the IP address of the laptop by running the command prompt (found in Start – Accessories). On the command line type 'ipconfig', this will display all the data associated with the Ethernet connections. Record the 'Local Area Connection IPv4-Address'.

If your primary connection is done wirelessly, you will need to connect the cable from the Isaac to your laptop, and power up the Isaac before recording the IP address.

On the Isaac, under 'COMM' – 'Ethernet Settings' turn the DHCP to **OFF**. The *IP Address* of the Isaac should be set to one address higher than the IP of the laptop.

For example Laptop = 169.254.96.1, set the Isaac to 169.254.96.2

Verify that the correct selections have been made in the 'Serial Port' menu for the type of data you wish to collect (Results, 0.1sec data, etc.) Also verify that 'Output results' in the 'PROG' menu have the Ethernet box selected for every test you wish to collect.


Starting HyperTerminal, the opening screen asks for a connection description, this description can be saved for future use to avoid going through all the configurations. We have chosen to call our example 'Isaac'.



With a connection description made the next screen to appear is Connect To. Hyper terminal has multiple ways of communicating. In the Connect using pull down menu choose TCP/IP (Winsock).



With the TCP/IP selection made the Host address and port numbering must be entered. The IP of the Isaac is the Host. The port number is always 23.

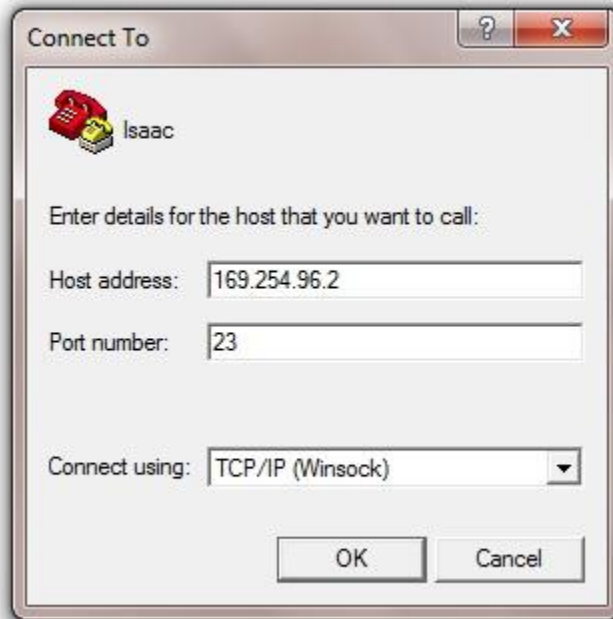


Pressing OK will initiate the socket connection from HyperTerminal to the Isaac. A successful connection will be shown by the connected counter in the lower right corner of the HyperTerminal screen.




The easiest way to verify communication is to start and abort a test. The data string will display after the abort. A typical string is shown below.




To gather multiple tests automatically, HyperTerminal has a feature to collect the text and save it to a file. Select 'Transfer' then 'Capture Text...'

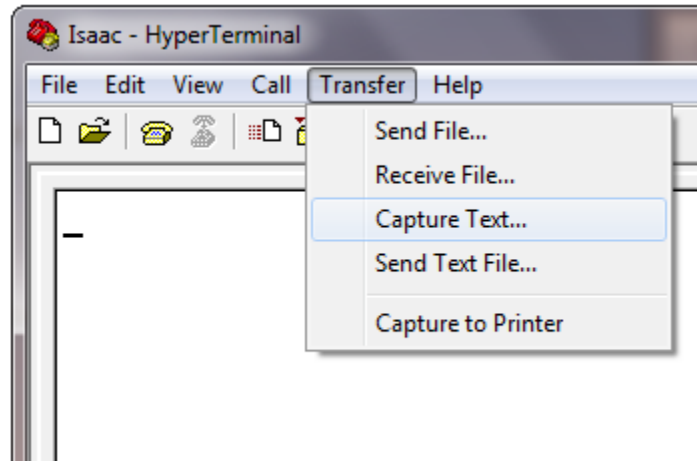

HyperTerminal will now ask for a filename for the data. Remember to make sure the extension is .TXT

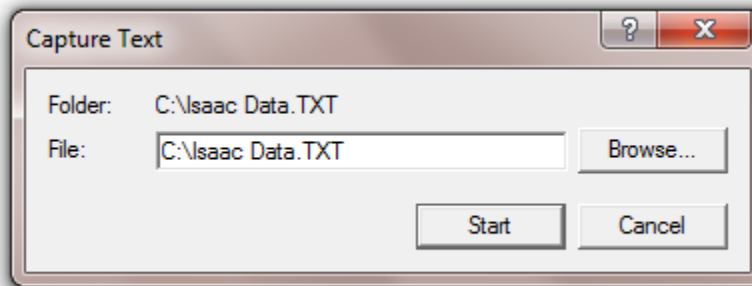

With a file name chosen, press start to begin the collection. Any data sent from the Isaac will be recorded under the filename that was specified, until you return to the 'Transfer' and 'Capture Text..' and press stop.

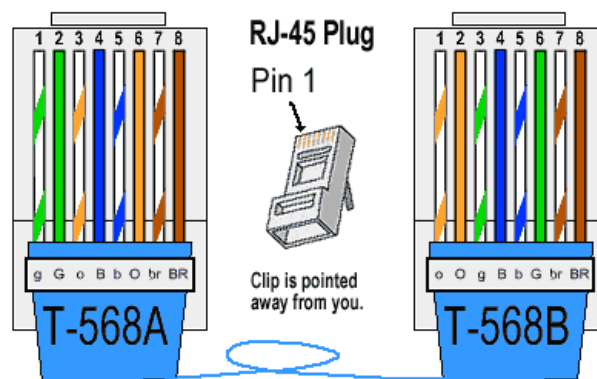

(801)264-1000

79 West 4500 South Unit #21

Salt Lake City, UT 84107

[www.zaxisinc.com](http://www.zaxisinc.com)